FRONT DOOR COURTESY SWITCH

COMPONENTS

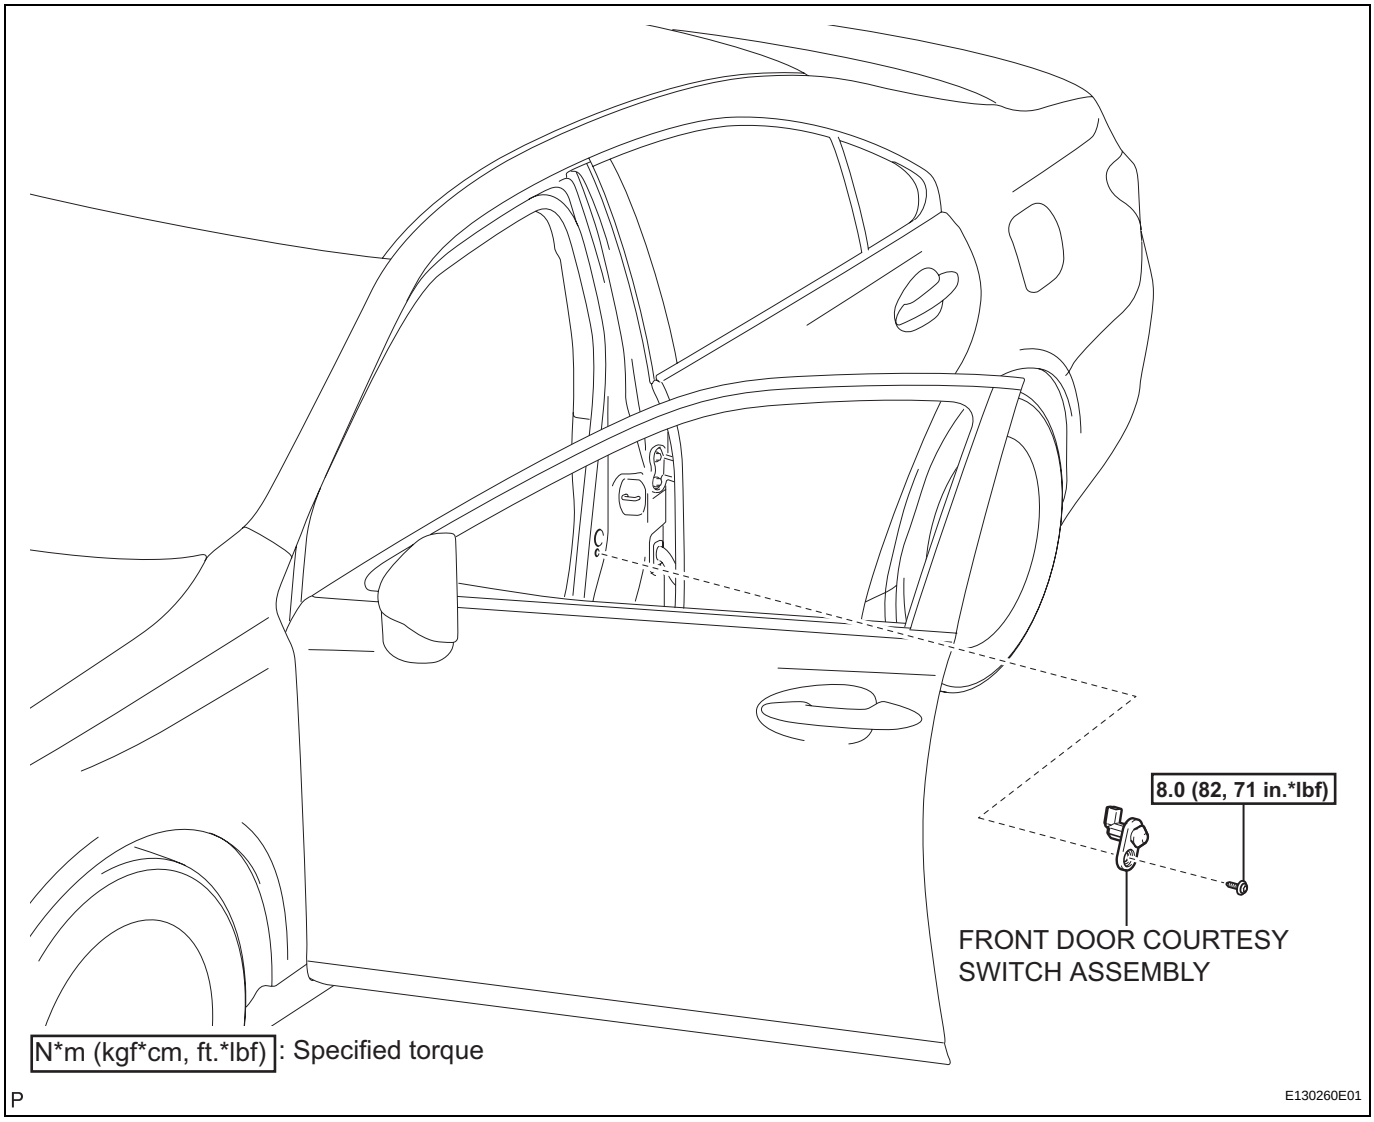

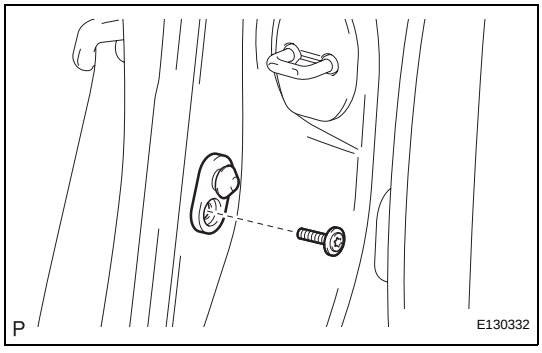

REMOVAL

1. **REMOVE FRONT DOOR COURTESY SWITCH ASSEMBLY**
   (a) Using a "TORX" socket wrench (T30), remove the "TORX" bolt.
   (b) Disconnect the connector and remove the front door courtesy switch assembly.

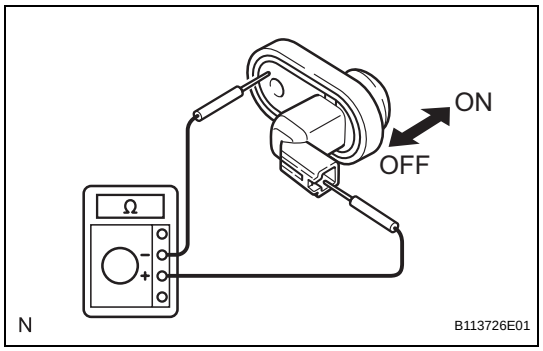

INSPECTION

1. INSPECT FRONT DOOR COURTESY SWITCH

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - Switch body	Pushed (OFF)	10 kΩ or higher
1 - Switch body	Not pushed (ON)	Below 1 Ω

If the result is not as specified, replace the front door courtesy switch.